

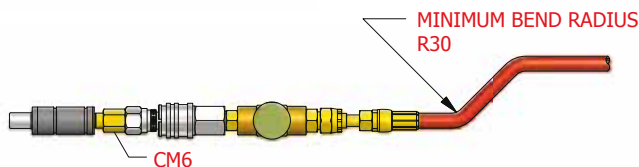
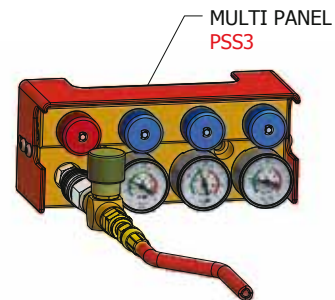


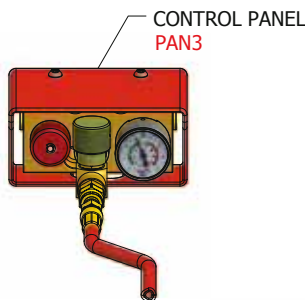



CHARGING METHOD

GAS SPRING for fitting system type can be charged through the charging plug on PANEL.

For self-contained type, checking pressure and charging gas can be done by PRESSURE TESTER.

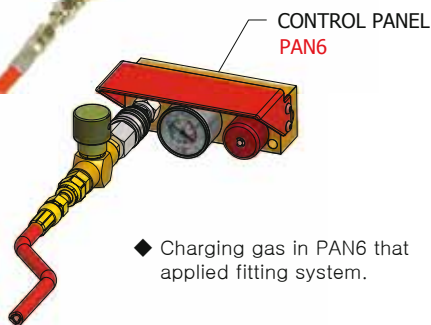


◆ GAS SPRING
TSP0170 ~ 0320
TSM0150

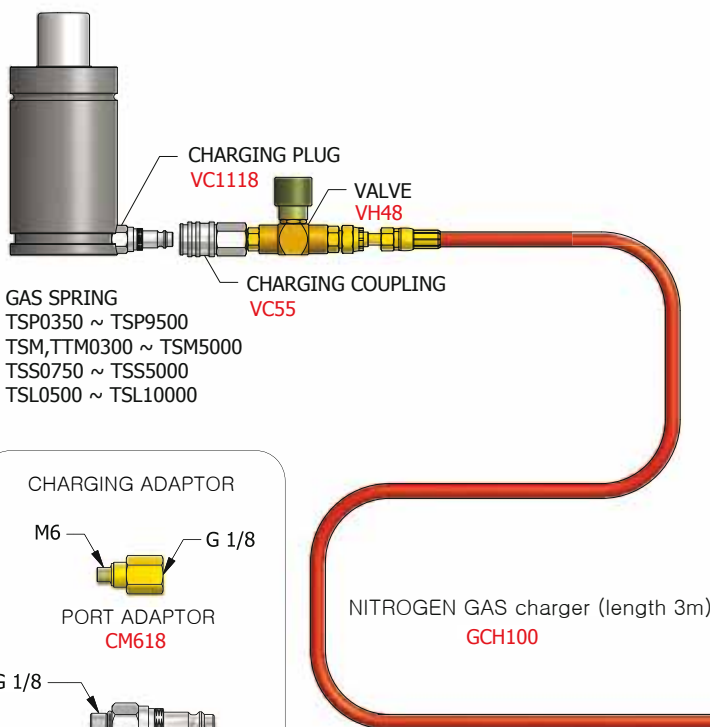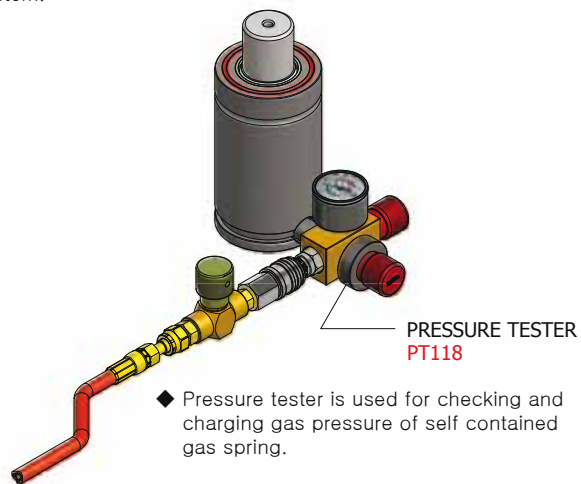

CHARGING ADAPTOR



PORT ADAPTOR
CM618

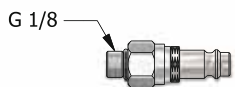

CHARGING PLUG
VC1118

